


Put a vertical pin at today's date in the analemmatic dial above. Keep the paper horizontal and turn it until the two dials agree. The compass rose will then indicate true directions.

85° N
 (Add one hour for Daylight Savings Time)

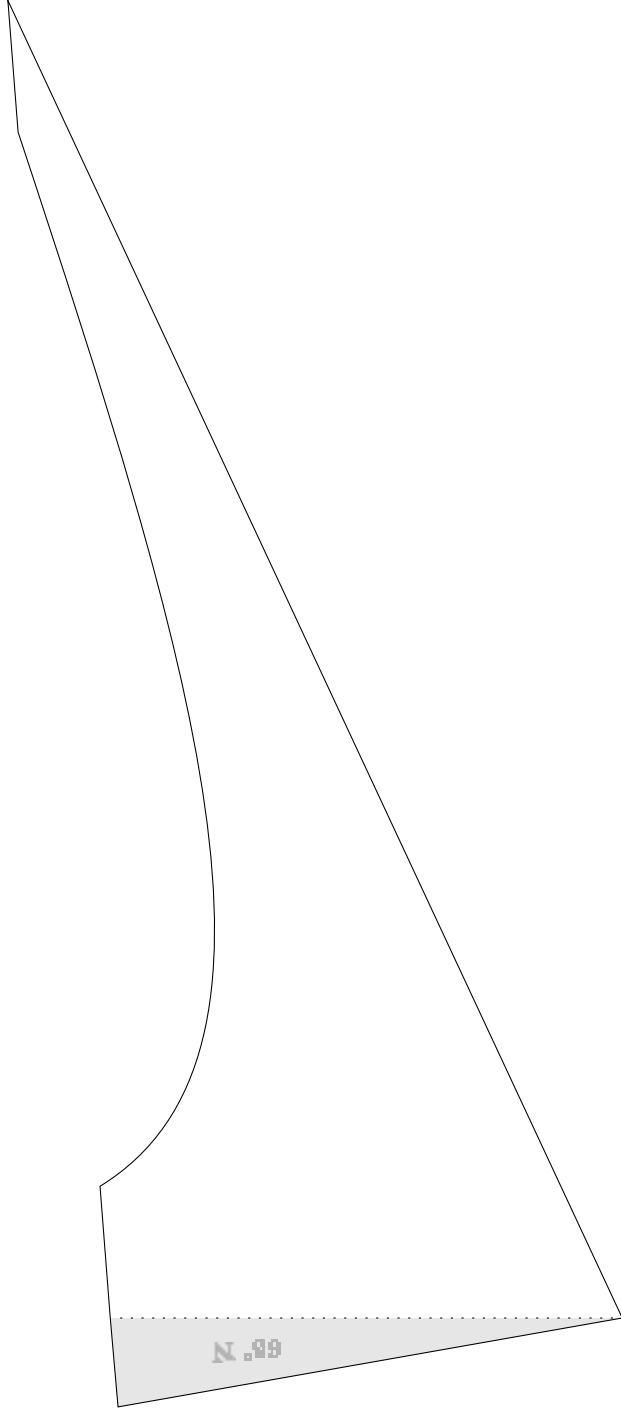

Gnomon for latitude 61° N

(Cut along solid lines, score along dashed line, fold into shape, and glue to dial. You may prefer to use this as a template for cutting a gnomon out of stiffer material.)

For further information on sundial construction, see <http://www.sundials.co.uk/projects.htm>